

Owner's Manual, Installation Instruction and Trouble Shooting Guideline:

Applies to the following models:

1. Audi A4 / S4 / A5 / S5 | 2009-2015 (MMI 3G / MMI 3G+) – 10.25" / 12.5" Product Series
2. Audi Q5 / SQ5 | 2008-2017 (MMI 3G / MMI 3G+) – 10.25" / 12.5" Product Series

Before the installation, please confirm you ordered the correct model for your vehicle: [HERE](#)

It's very important to confirm that you have ordered and received the correct model for your vehicle. In order to confirm before the installation, please remove the Original screen and check the LVDS connector behind the screen.

For vehicle WITH original Audi Navigation:

Please check if the connector circled in the picture below matches with the new LVDS connector on the new wiring harness that come with the package. The new LVDS connector is located on the USB cable from the new harness. If it doesn't match, please contact us since it's the wrong unit.



For vehicle WITHOUT original Audi Navigation:

Please check if the connector circled in the picture below matches with the new LVDS connector on the new wiring harness that come with the package. The new LVDS connector is located on the USB cable from the new harness. If it doesn't match, please contact us since it's the wrong unit.





[Wiring Instruction]

vehicle ***“WITH” ORIGINAL Audi Navigation***



For

With Stock Navi.

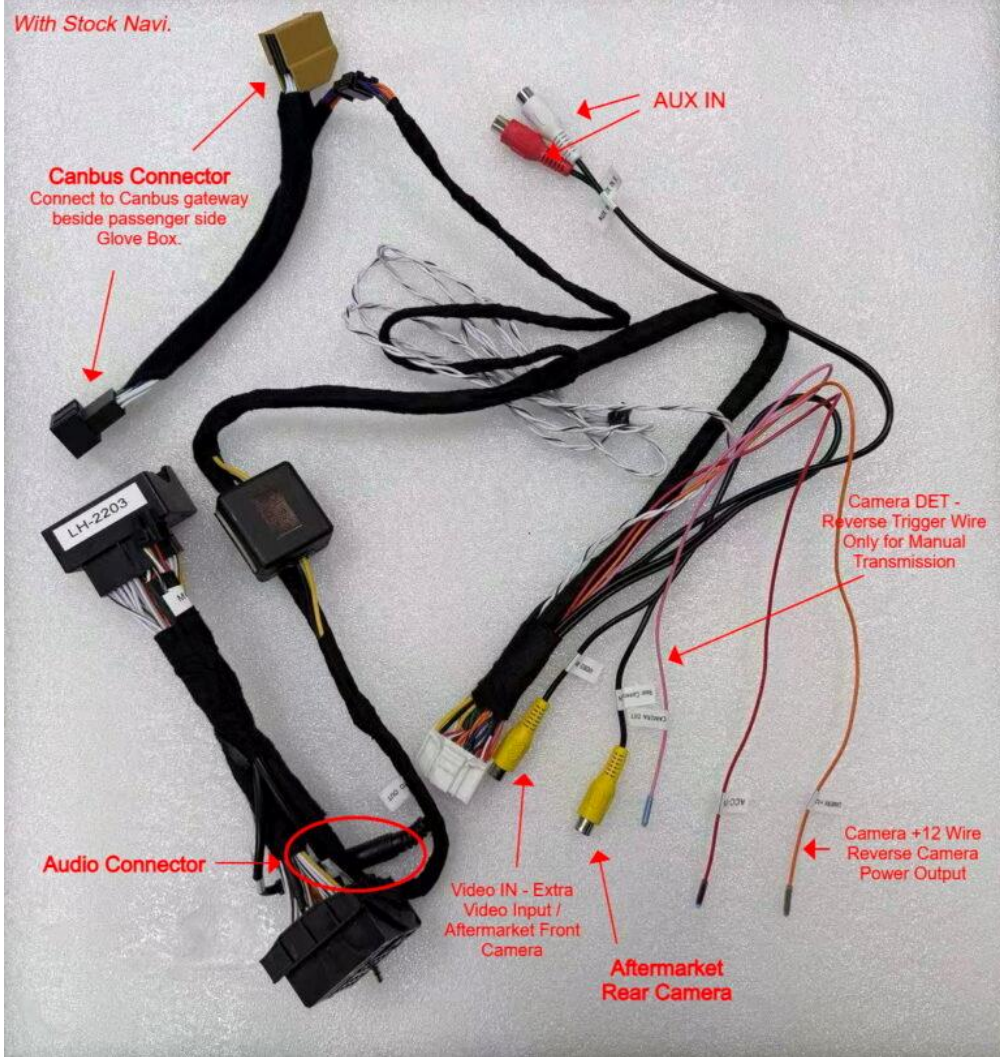

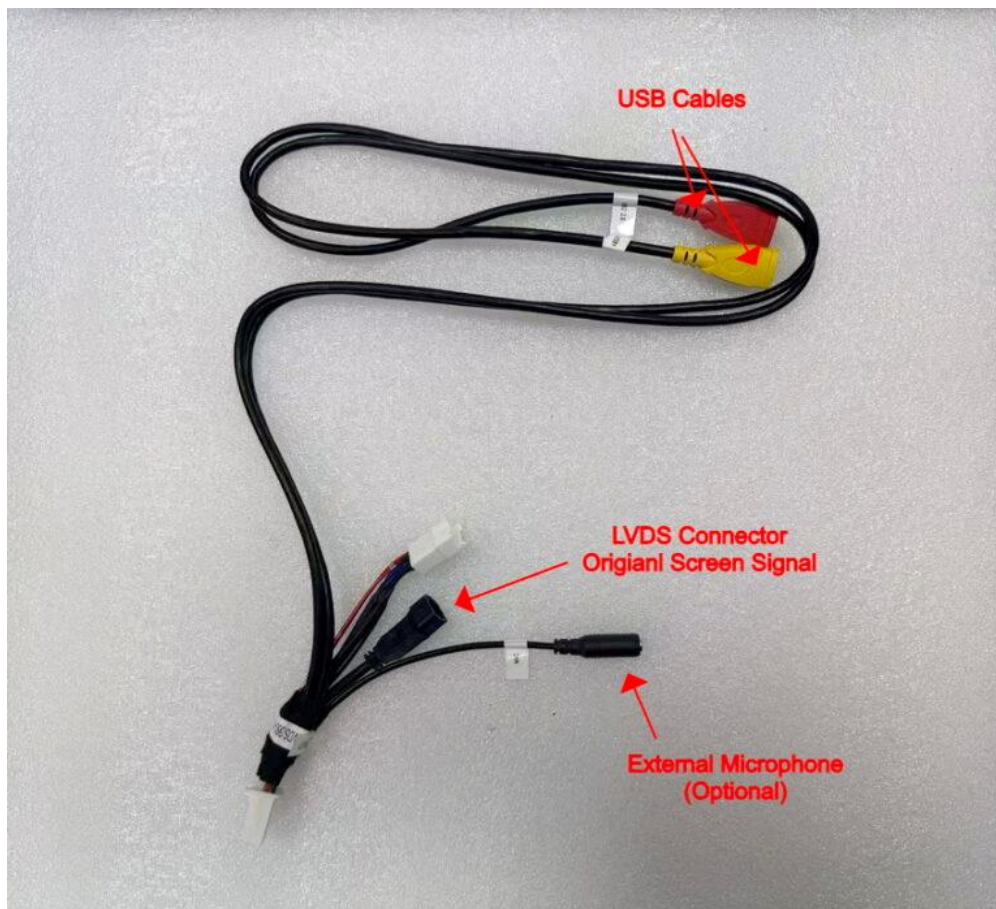

For vehicle “WITHOUT” ORIGINAL Audi Navigation

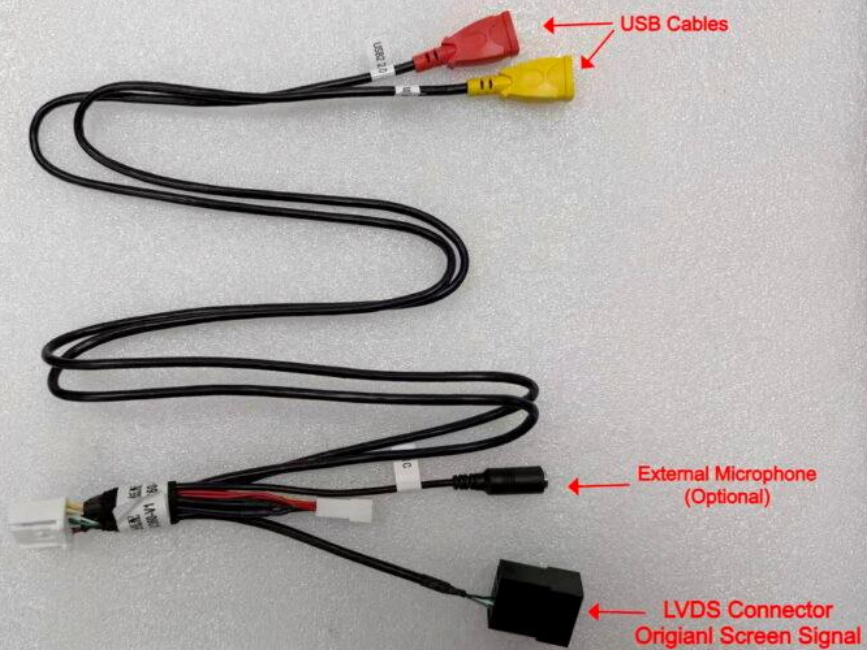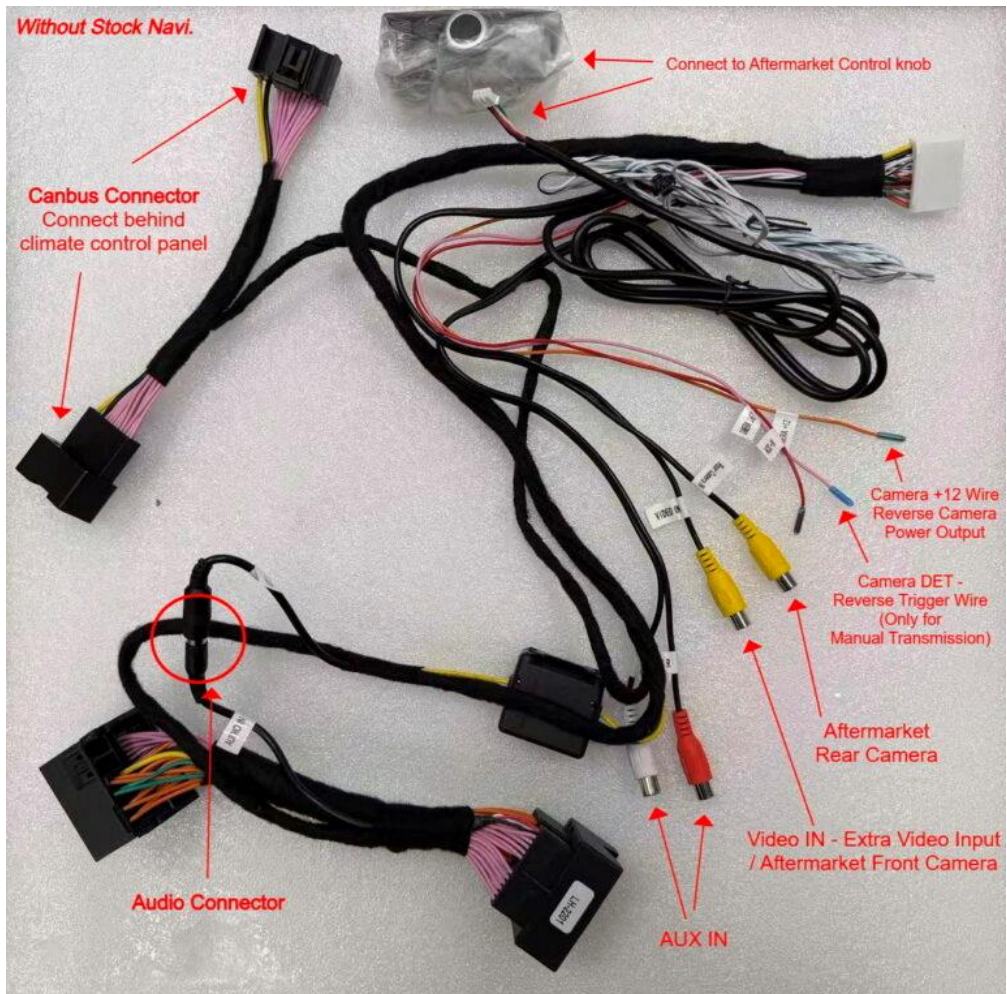



Accessory Wiring:

MMI AUX Interface:

- *The system's audio is routed through the original AUX or MMI interface.*
- *The MMI AUX interface must remain plugged into the glove box at all times, as it is only required to activate the AUX option in the original media menu.*
- *After installation, you will need to go to the original radio interface and switch the audio source to AUX mode, then keep it on this mode to ensure the new system audio works properly.*
- *Test the audio on the new system. If there is no sound, please check the original MMI interface and ensure it is functioning properly.*



[Audi A4 / A5 / S4 / S5] – Installation Video Instruction

For vehicle with ORIGINAL Audi Navigation

Canbus wire is located beside the passenger side glove box, you will need to drop the passenger side glove box to locate it.

Version 1:



Version 2:



For vehicle without ORIGINAL Audi Navigation

Canbus wire is located behind the climate control panel



[Audi Q5 / SQ5] – Installation Video Instruction

- *For vehicle with ORIGINAL Audi Navigation*

Canbus wire is located beside the passenger side glove box, you will need to drop the passenger side glove box to locate it.



- *For vehicle without ORIGINAL Audi Navigation*

Canbus wire is located behind the climate control panel



Installation Instruction Manual & Trouble Shooting Guideline (PDF Format):

DOWNLOAD 


[System Settings] – IMPORTANT

You can switch between the original screen and the new system using the “Car Info” icon.

- When using the original screen, touch control is not available. Please use the control knob to navigate the menu. Tapping the screen will switch back to the new interface.




After installation, please access Factory Settings and adjust the necessary settings as outlined below.

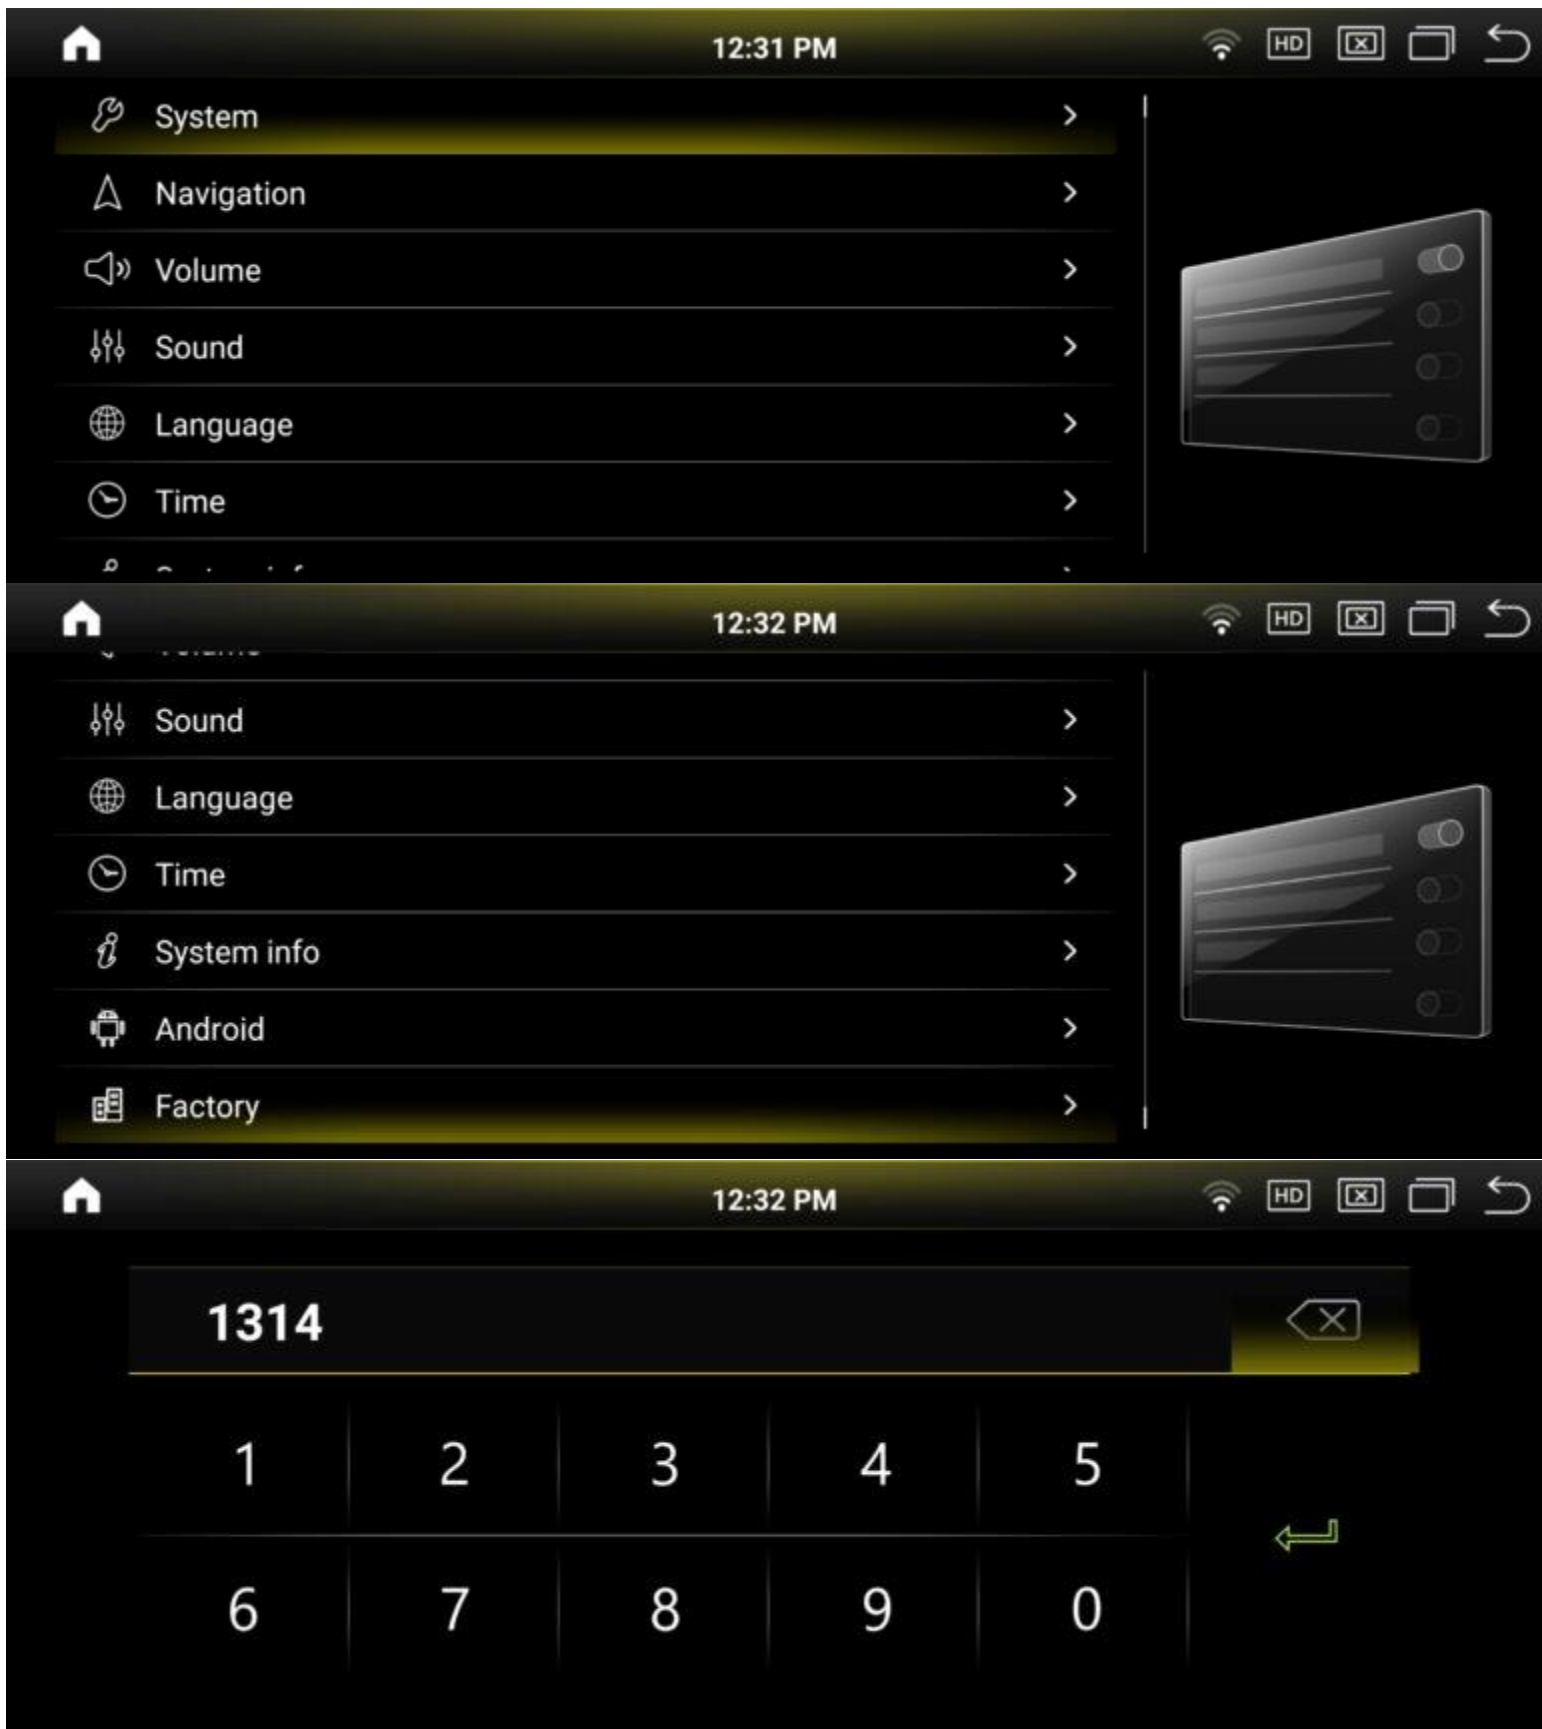


- Go to “Vehicle Display”
1. Select “Adaptive Resolution”

2. If you would like the original screen to display in full screen on the new system, simply tap “Full Screen.”
3. Other than the settings mentioned above, please do not change any other settings under “Vehicle Display.”

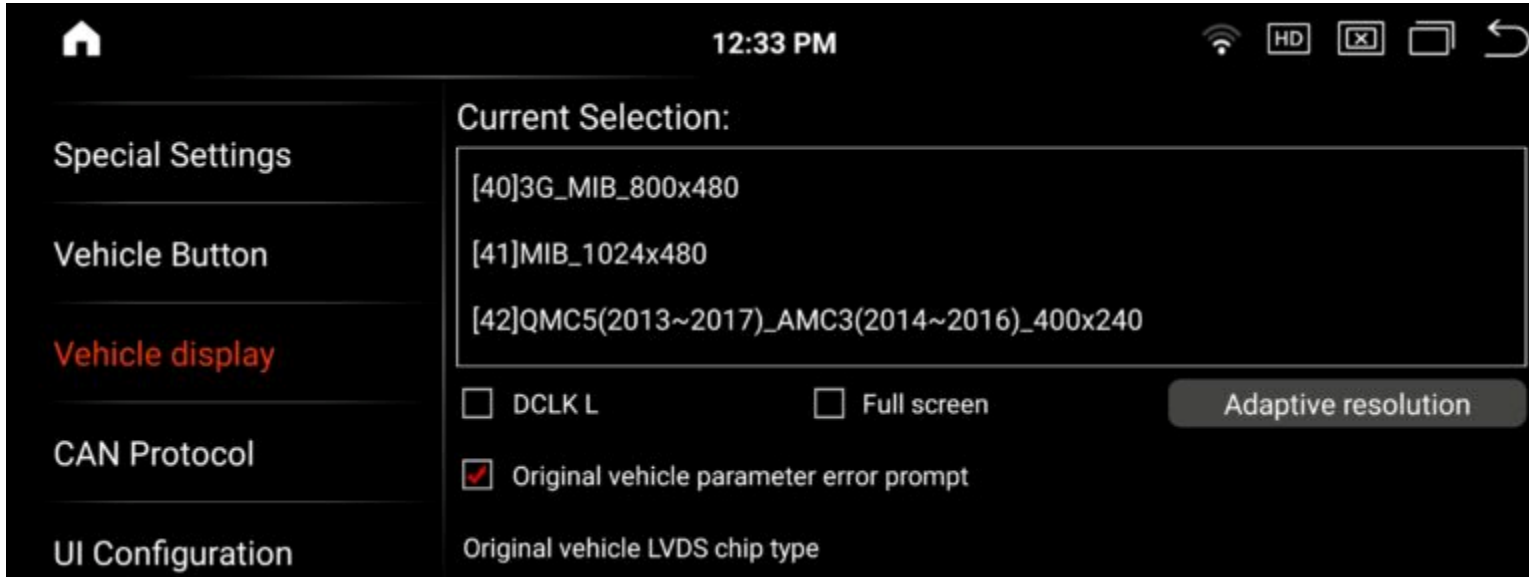

After installation, if the original command knob does not work on the new system, please adjust the settings under CAN Protocol.

- Go to “CAN Protocol”
- Try a different setting between 3G / 3G+
- Each time you change the protocol, please turn off the vehicle and the screen for 5 minutes for the changes to take effect.

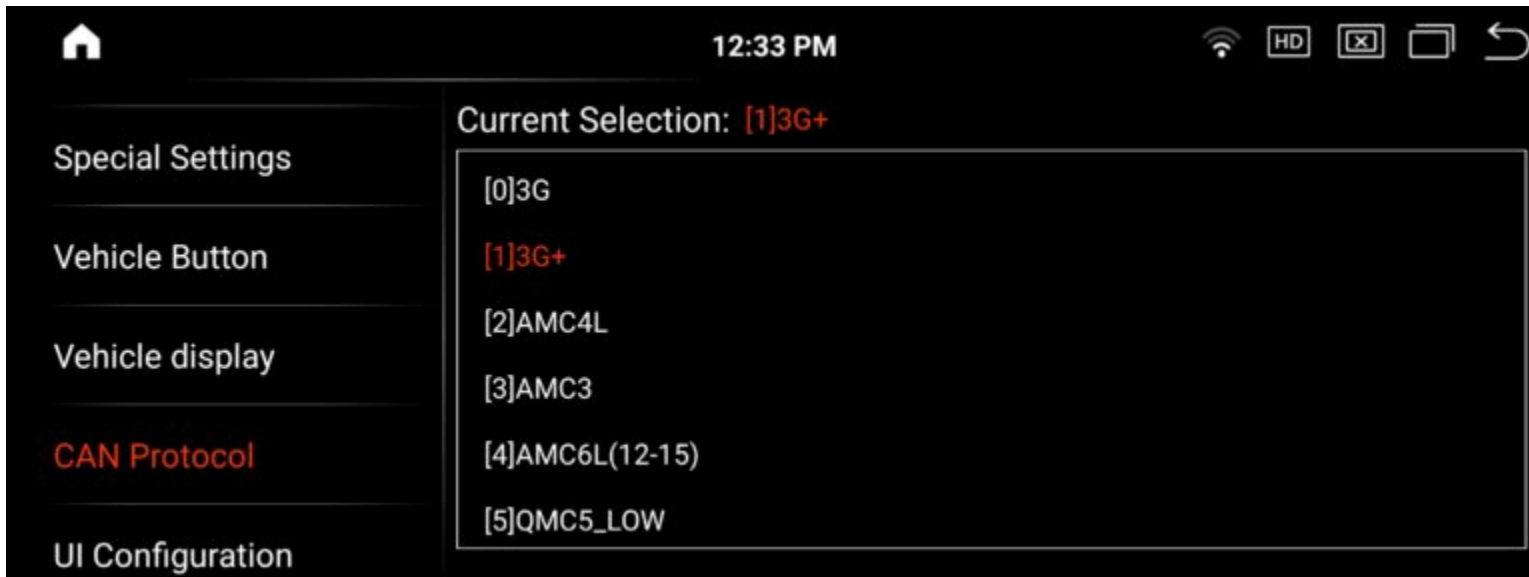


After installation, if the original camera is not working, please adjust the reversing settings.

- Go to Setting → System → Reversing Settings
- Original Camera
- Aftermarket Camera
- Other than the settings mentioned above, please do not change any other settings under “Reversing Settings.”




If the camera image appears reversed (left and right swapped), please adjust the “Rear Camera Mirrored” setting under Reversing Settings.

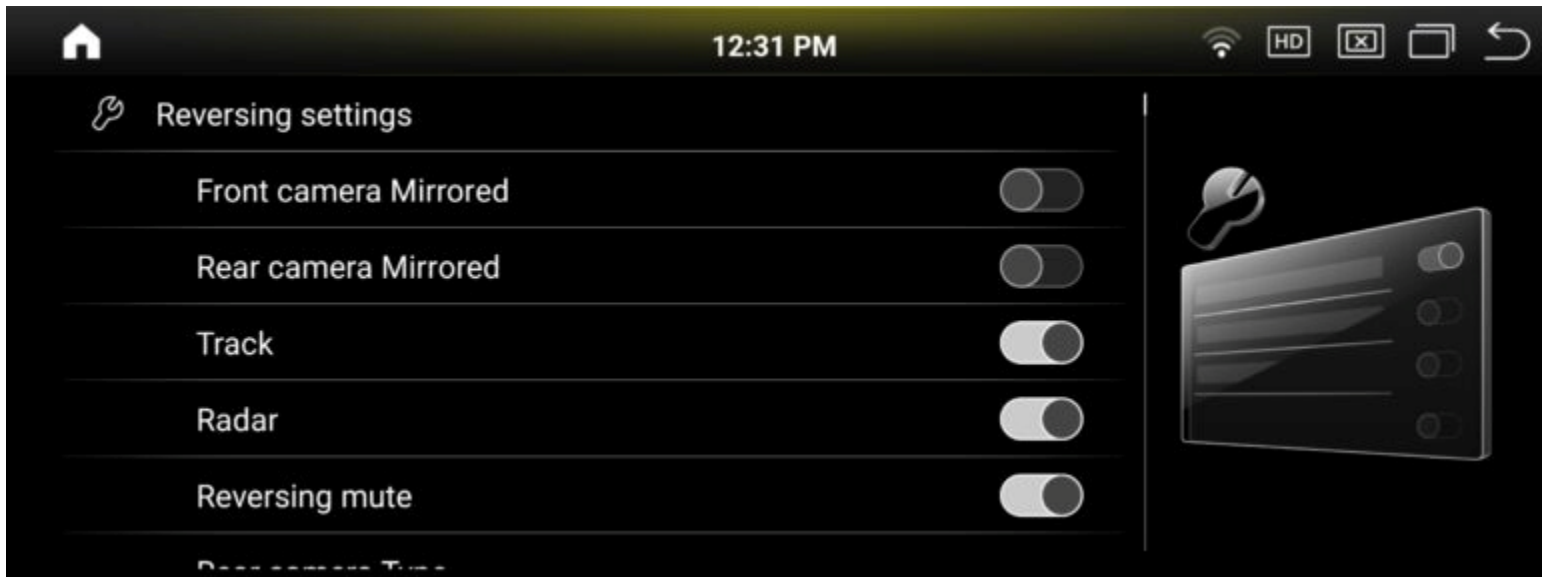


Display Brightness Setting:

- You can adjust the brightness levels for Day Mode and Night Mode under Display Settings.

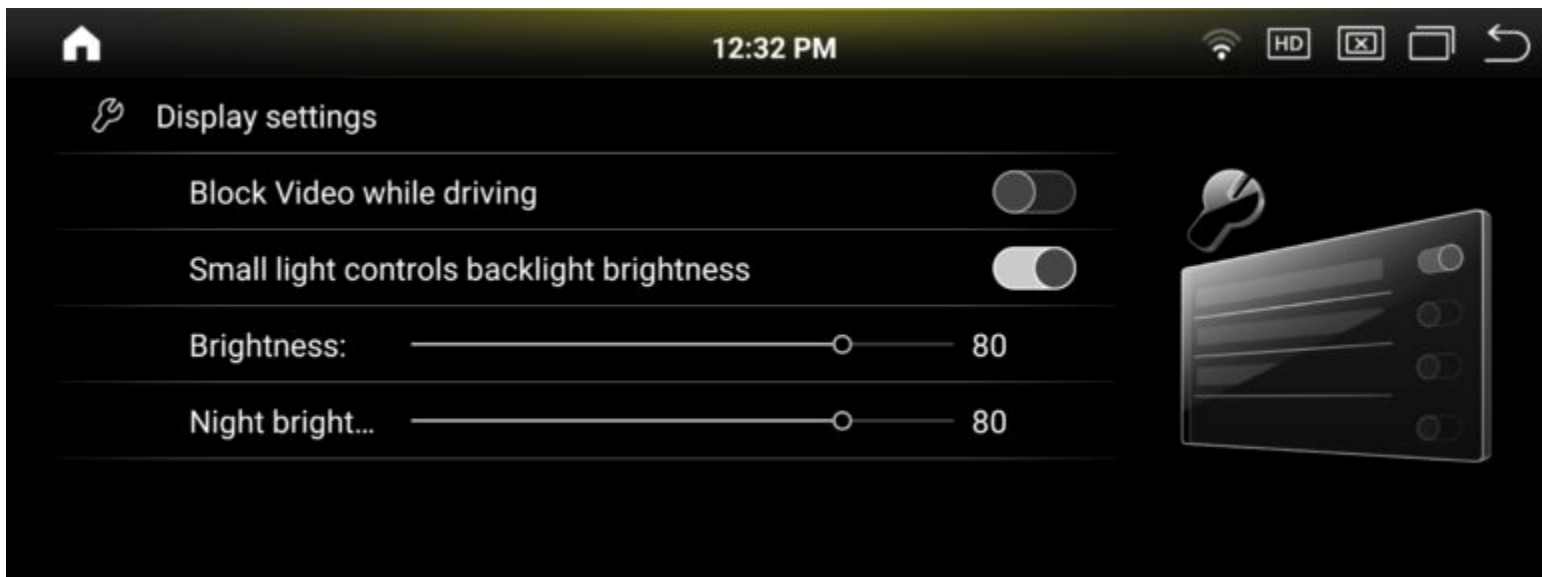

You can assign the function of the original Voice Command button from the menu below.

- Go to Setting → System → Factory (Enter Password: 1314).
- Go to “Vehicle Button” → Voice Key Selection
- Select the desired feature based on your preference.

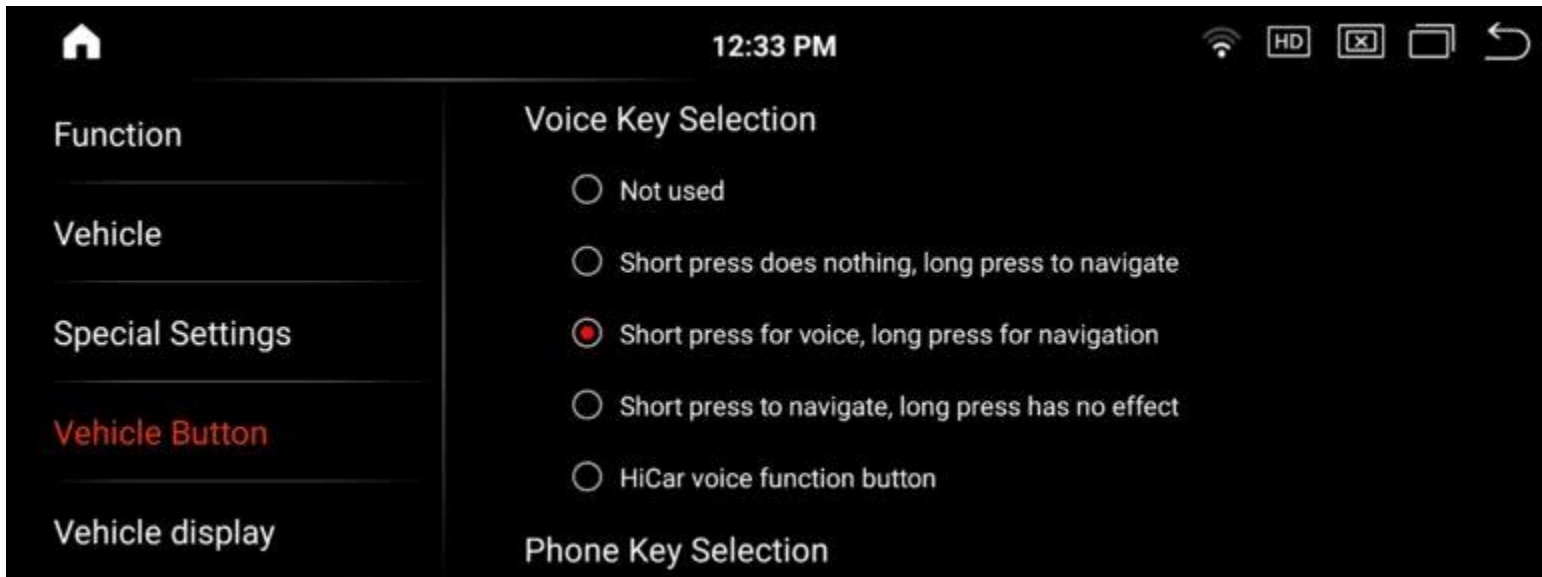


[Airbag Light Indicator]

Note: Please read the following instructions before starting the installation. If your vehicle is equipped with an airbag indicator light on the original dashboard, do not turn on the ignition while the harness is not properly connected. Otherwise, the airbag light may be triggered and may require a scanner to reset. Please only turn on the ignition after the airbag indicator has been properly connected.


- **With AirBag Indicator:** *Connect* the harness mentioned below
- **Without AirBag Indicator:** *Disconnect* the harness mentioned below

- ① Disconnect this connector if the original dash does not come with Airbag Indicator.
- ② Connect this connector if the original dash comes with Airbag Indicator.

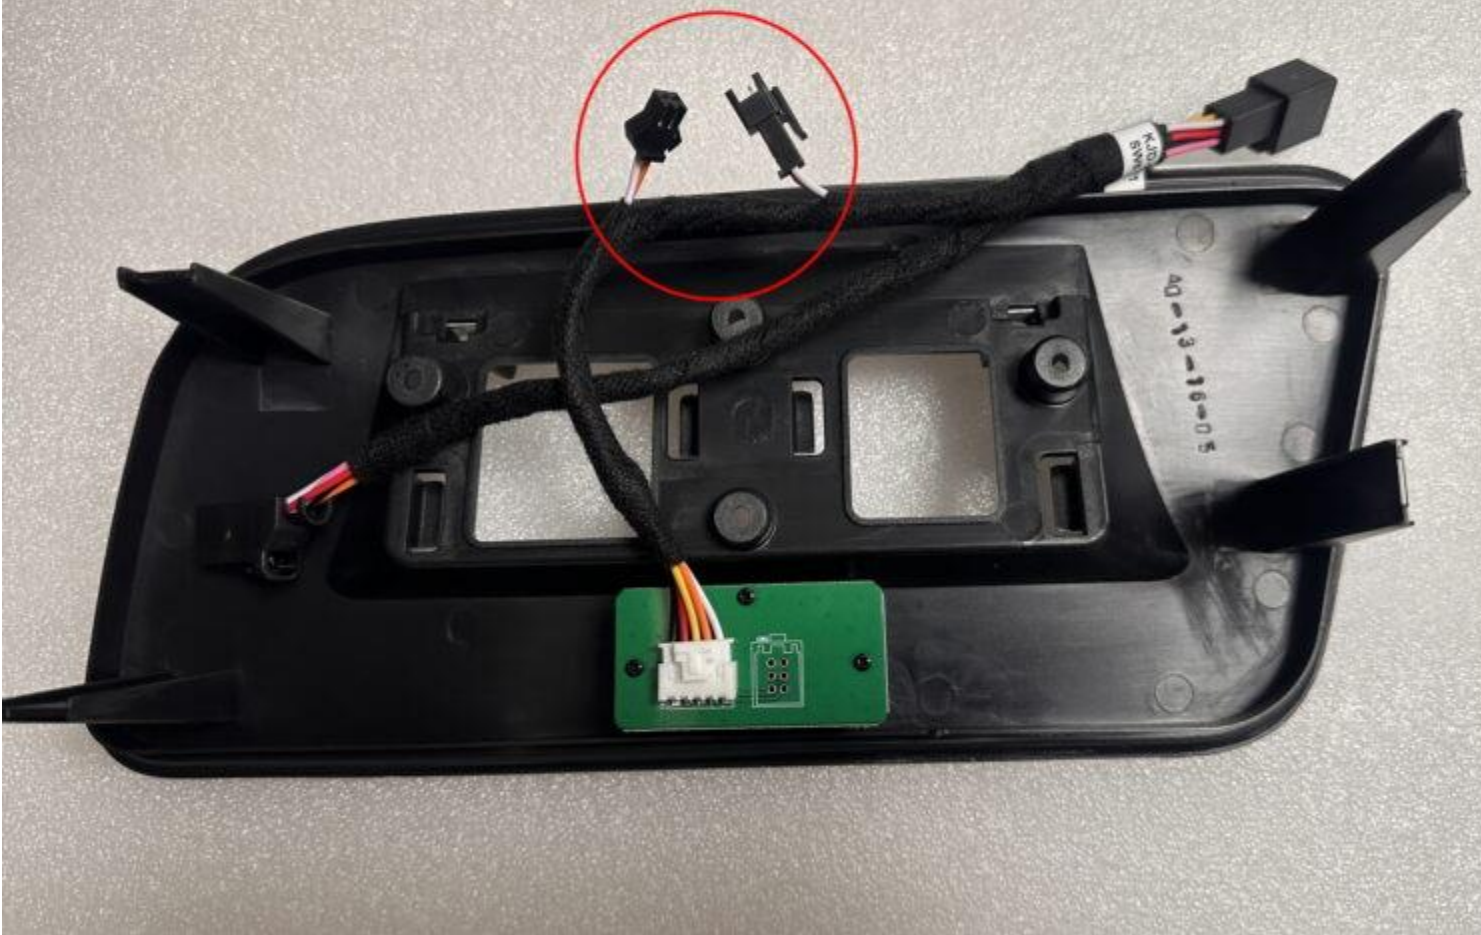

Note: Only Applies to vehicle comes with airbag indicator on the original dash

If your vehicle comes with airbag indicator shown as the picture below, please make sure do not turn on the ignition when this indicator is disconnected. Otherwise, it may cause an error light showing on the instrument cluster and you may need to use a scanner to turn it off. During the installation, please make sure the original airbag indicator is connected by using a T-harness that comes with the package. The indicator needs to be connected and hide behind the new screen.

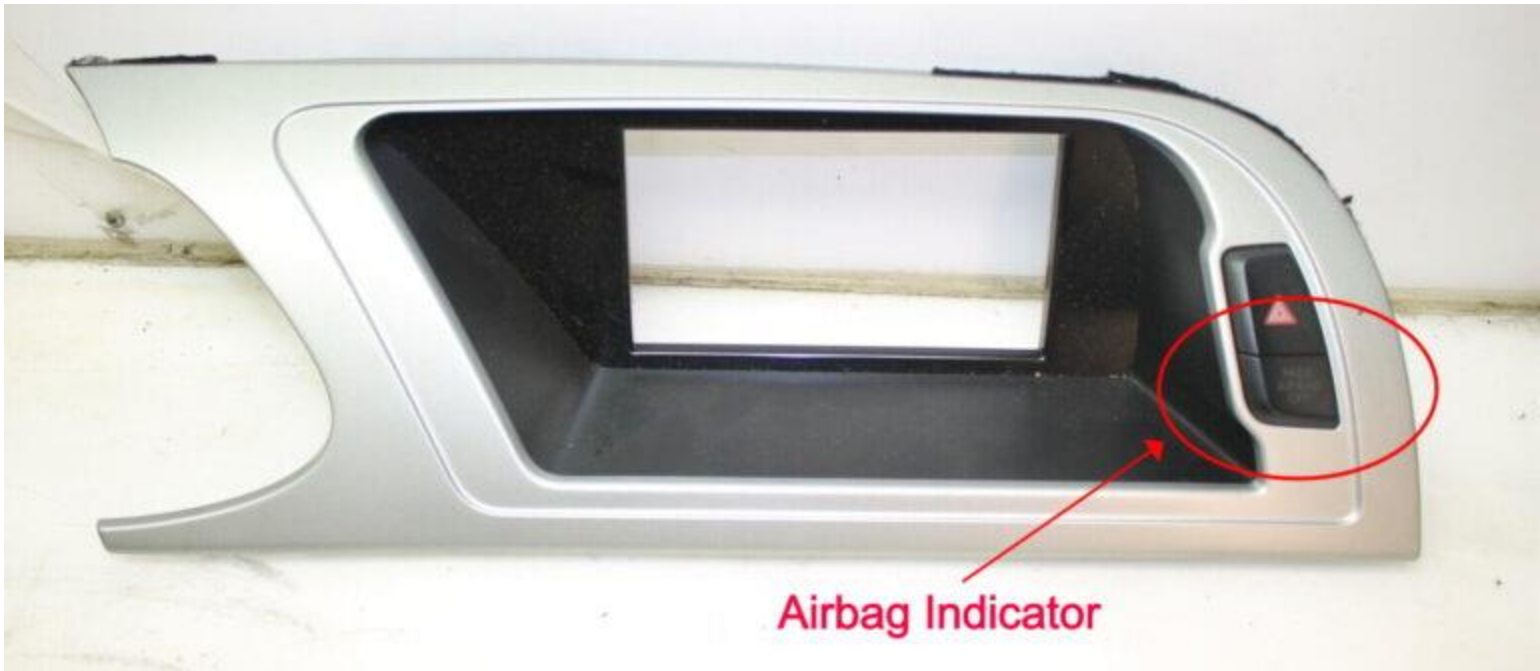



[Canbus Connector]

In the package, it will come with two different Canbus Harnes, it is very important to make sure it's connected to the correct location.

- **With Original Navigation:** Canbus gateway is located beside passenger side glove ompartment (Require to remove the glove box to see it)
- **Without Original Navigation:** Canbus gateway is located behind original climate control panel from the front center console.

CanBus Harness for vehicle with original navigation

- Connect to the side of the the passenger side glove compartment

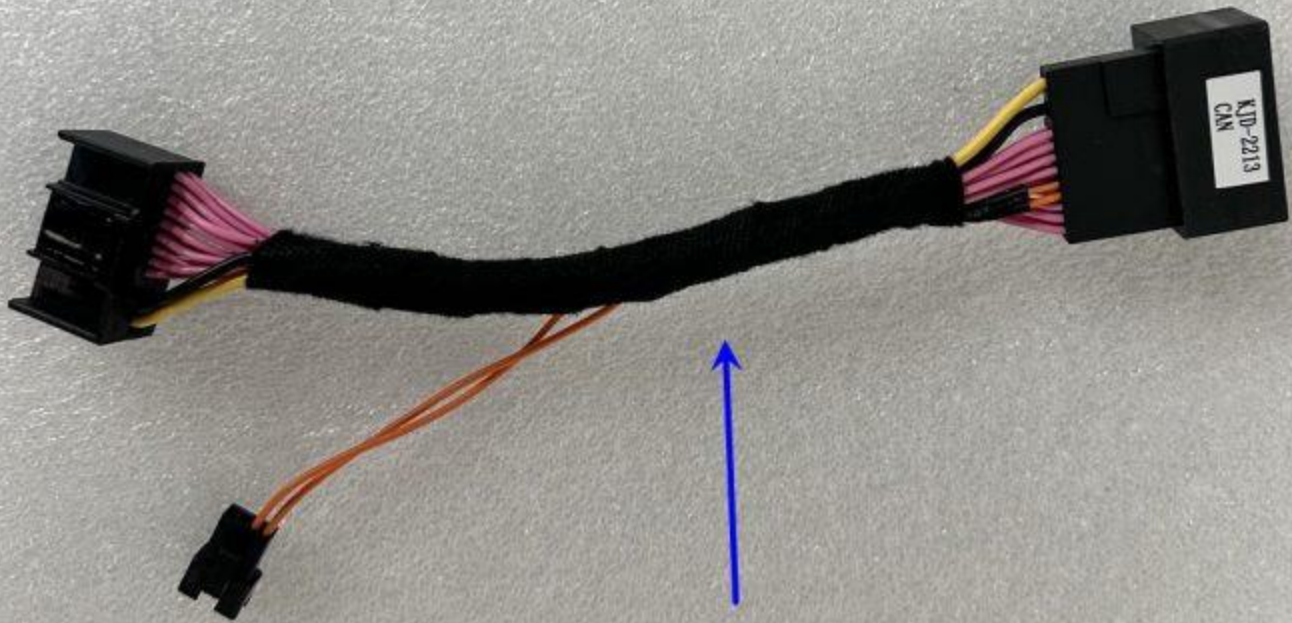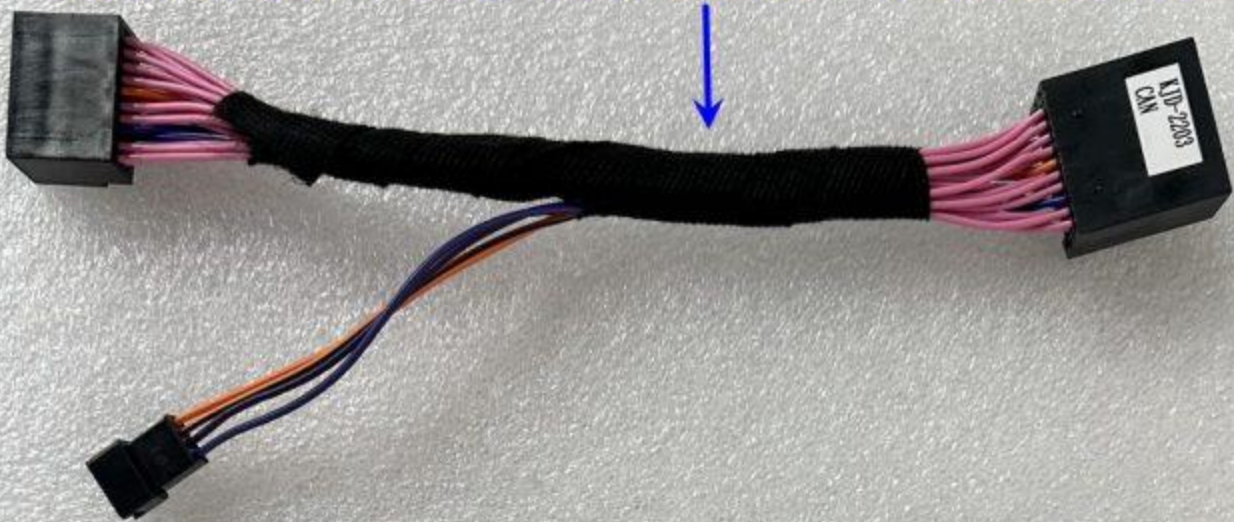

CanBus Harness for vehicle without original navigation

- Connect to the back of original climate control panel

[Audio Connection]

If you experience audio issues after installation, please set the media source to AUX from the original Audi interface.

You may need to connect the **AMI AUX cable** to the AMI port in the passenger-side glove box. On the main harness, ensure both **Audio IN** and **Audio OUT** are connected (ignore **MOST Audio Out**).

Tap “**Car Info**” to access the original system, then press “**Media**” and confirm “**External Audio Device (AUX)**” is available. Select AUX, then switch back to the new system to enable audio.

If AUX is not visible, check the AMI AUX cable connection or try a different cable. If your vehicle already has AUX, the AMI AUX cable is not required.



Audi Audio Setup Guide (Important)

Before Installation:

- Please **test the AMI interface first**.
- Make sure the original system shows “**External Audio Device (AUX)**” in the media menu.
- If AUX is not available, resolve this before starting the installation.

After Installation – Audio Setup Steps

Set Media Source

- Go to the original Audi system
- Select **Media** → **External Audio Device (AUX)**

Connect AMI AUX Cable (if required)

- Plug the **AMI AUX cable** into the AMI port in the **passenger-side glove box**
- No additional wiring is needed (used only to activate AUX)

Check Main Harness Connections

- Ensure **Audio IN** is connected
- Ensure **Audio OUT** is connected
- Ignore **MOST Audio Out** (not required)

Switch to Original System

- Tap “**Car Info**” on the new screen
- Press “**Media**” on the original radio
- Confirm **AUX option is visible**

Switch Back to Android System

- After selecting AUX, return to the new system
- Audio should now work properly

Troubleshooting

If **AUX option is not visible**:

- Re-check AMI AUX cable connection
- Try a **different AMI AUX cable**

If your vehicle **already has AUX available**:

- You **do not need** the AMI AUX cable

Trouble Shooting:

If you only have audio from one side of the speaker, you can also check the Audio IN and Audio Out connector on the main harness and make sure they are connected properly.

For more details, please refer to the trouble shooting guideline:

Trouble Shooting Guideline (PDF Format):



[Reverse Camera]

Important: After the installation, if the camera is not functional, please follow the steps below to change the settings:

- For **Original Camera**: Please go to Setting – Camera Setting – **OEM Camera**
- For **Aftermarket Camera**: Please go to Setting – Camera Setting – **Aftermarket Camera**

Aftermarket Camera Installation Instruction:

Video 1:



Video 2:



[UI Interface]

How to change UI Interface:



Note: If you don't see the options shown in the video above. Please download the file from below. Extract the file and only copy the folder "OEM" to a USB. Then insert to the USB port from the screen (either red or yellow). wait for 5 seconds, the UI will be updated automatically.



[BT Microphone Volume]

The system comes with external microphone connectivity. It's not necessary to connect an external microphone since the system comes with built-in microphone. However, you can also connect a high sensitivity microphone to enhance the Bluetooth phone call quality.

The system also comes with settings which will allow you to increase the sensitivity of the built-in microphone. Please follow the step below to adjust the settings:

1. Setting – Factory Settings (Password: 1314)
2. Mic Gain (You can adjust the value here)

The system also retains the original Bluetooth as well. You can also connect to the original OEM Bluetooth instead of the Android Bluetooth if necessary.

[Black Screen Issue / System Reset]

If the screen stay blank / black when you turn on the vehicle, you can use a small pin (such as Sim Card Tray Eject Pin) to click on the reset button. the system will restart.




[Offline Navigation]

Using Google Maps for Offline Navigation. To use navigation without an internet connection, follow these steps:

1. Connect to WiFi – Ensure the device is connected to a stable WiFi network.
2. Update Google Maps – Open the Google Play Store, search for Google Maps, and update it to the latest version.
3. Download Offline Maps
4. Open the Google Maps app.
5. Tap your profile icon in the top right corner.
6. Select Offline maps > Select your own map.
7. Zoom and position the area you want to download.
8. Tap Download.

Once the map is downloaded, you'll be able to use navigation and search for locations in that area without an internet connection.

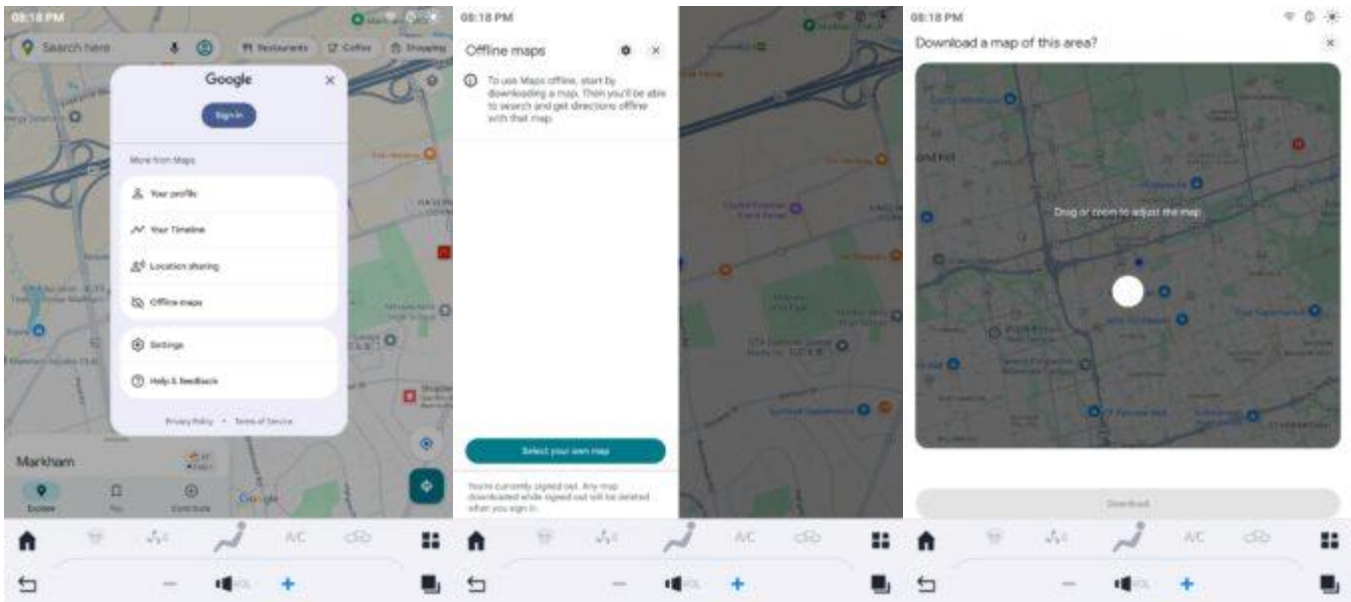

[How to install offline Navigation software and APK files]



[Apple CarPlay]

How to connect / reset wireless Apple CarPlay:

Note: If you have any difficulties on connecting the CarPlay on the new system, please make sure you have **DISCONNECTED** the cellphone from the original Bluetooth first. You can go to the Bluetooth menu of the cellphone to confirm it. If you see any connections with the original system, please disconnect and unpair it before try to connect the CarPlay from the New Android Screen.

Wireless Apple CarPlay only use Bluetooth to pair at the beginning, once it got paired, it will automatically switch to the WiFi channel at the background. While using Wireless Apple CarPlay, you can not turn on WiFi hotspot at the same time. If you would like to turn on the WiFi Hotspot to use some of the applications (such as YouTube..etc), you will need to turn off the CarPlay first. The procedure to turn off the CarPlay shows as below:



CarPlay Reset Procedure:

Part 1: Reset and Erase all previous pairing record

Step 1: Go to CarPlay Setting Menu on the iPhone. (It's under General Setting menu of the phone. Under General Setting, Search CarPlay)

Step 2: Delete and forget all the devices under the CarPlay list.

Step 3: Restart the iPhone.

Step 4: Go to the Bluetooth menu on the New Android Screen.

Step 5: Select the connection icon on the Bluetooth menu (Located at the upper right corner of the Bluetooth menu). Delete and unpair all previous connected device under the Bluetooth menu.

Step 6: Reset the new system by using a tiny pin to click on the reset button which is usually located on the left of the unit. There are two holes on the left, the upper one is the Reset button.

Step 7: Once both the phone and the screen are both restarted, you can start to pair the carplay again.

Part 2: How to connect Wireless Apple CarPlay:

Step 1: Go to Bluetooth menu of the New Android System. Select the connection icon on the Bluetooth menu (Located at the upper right corner of the Bluetooth menu).

Step 2: Go to the Bluetooth menu of your iPhone. Pair the New Android System with the iPhone.

Note: Wireless Apple CarPlay ONLY use Bluetooth to pair at the beginning. Once they got paired, both devices will switch to WiFi channel at the background. Therefore, the Bluetooth will show "Disconnected" on the iPhone and the tablet. This is "Normal" and please do not Manually

Connect the Bluetooth when the CarPlay connection is established.

Step 3: Once it got paired, the Bluetooth will be disconnected automatically and the connection will be switch to WiFi channel at the background

Step 4: System will automatically open CarAuto (CarPlay) on the table screen.

Step 5: Grant the authorization message of "Using CarPlay" on the iPhone.

Guidelines for Using CarPlay/Android Auto:

Connection Requirements

- **Wireless CarPlay/Android Auto uses your phone's WiFi channel** to operate.
- While connected, your phone's WiFi is occupied by CarPlay/Android Auto.
- **Do not manually connect your phone's WiFi hotspot to the Tesla system** while CarPlay/Android Auto is active — this may cause conflicts or connectivity issues.

Automatic Switching Behavior

- After pairing is complete, the system will **automatically switch from Bluetooth to WiFi** to run CarPlay/Android Auto.
- Once connected via WiFi, **Bluetooth will show as “Disconnected”** — this is normal.
- **Do not manually reconnect Bluetooth** after CarPlay/Android Auto is running.

How to Disconnect CarPlay and Use WiFi Hotspot Instead

If you prefer to use your phone’s WiFi hotspot for internet on the system rather than CarPlay/Android Auto, follow these steps:

Step 1: Disable CarPlay on iPhone

- Go to: Settings > General > CarPlay
- Find the Tesla system and **turn off CarPlay** (do not delete the connection).

Step 2: Enable Phone’s WiFi Hotspot

- Turn on the **WiFi hotspot** feature on your phone.

Step 3: Connect the System to Hotspot

- On the Tesla system, open **WiFi settings**.
- Connect to your phone’s hotspot.
- The system may automatically open the **CarAuto app** and disable WiFi again.

If this happens:

- **Close the CarAuto app.**
- **Manually re-enable WiFi** on the Tesla system.

Note: The system will automatically try to launch CarPlay/Android Auto anytime your phone connects via Bluetooth.

To Keep the System in Hotspot Mode

- Open the **CarAuto app settings** on the Tesla screen.
- **Disable the “Auto Connect” option** to prevent automatic switching back to CarPlay/Android Auto.

[Android Auto]

How to connect / reset wireless Android Auto:

Note: If you have any issues when connecting to Apple CarPlay, please make sure you have unpaired and forgot the **Original** bluetooth connection from the phone and from the original system. You can manually go to the original BT menu to delete your mobile device before start to connect to the CarPlay on the new system.

Wireless Apple CarPlay only use Bluetooth to pair at the beginning, once it got paired, it will automatically switch to the WiFi channel at the background. While using the Wireless Apple CarPlay, you can not turn on WiFi hotspot at the same time. If you would like to turn on the WiFi Hotspot to use some of the applications (such as YouTube..etc). you will need to turn off the CarPlay first. The procedure to turn off the CarPlay shows as below:



How to install offline Navigation software and APK files:



[How to run a Factory Reset]

System Recovery Procedure:

This step will reset the system to factory default settings. It will also erase the application that you installed previously. You can also re-install it again afterwards.

1. Go to Setting – System info – System Recovery (Note: Make sure the engine is running and do not turn off the unit.)
2. Wait until the system recovery finished and reboot by itself
3. Once the system restarted, you will need to connect to WiFi internet to activate the Apple CarPlay again
4. Connect to WiFi internet (Hoptspot from cellphone will work). Open Z-Link. It will activate automatically.
5. Set up the camera settings again.
6. Re-install the Map (Map installation procedure is at the end of this user menu)

[Bootup Logo]

In order to change the booup logo, you can download the file from the link below.

1. Use a PC computer to download the file (mylogo13.zip) from the link below. No need to unzip or extract the file
2. Copy the zip file to the parent directory of a USB stick.
3. Make sure the USB is recognized by the system. If it's recognized by the unit, there will be a tiny USB icon shows on the upper right corner of the screen.
4. Go to Setting – Factory (Password: 1314)
5. Go to Boot Logo, choose “Import”.
6. Bootup logo will show on the second page.



For previous version of the system, please follow the step below:

In order to change the booup logo, you can download the file from the link below. Extract the file and copy the folder “OEM” into a USB. Insert the USB to the unit, make sure it’s been recognized by the system. If it’s been recognized, it should show a USB icon on the upper right corner of the screen. Wait for about 5 seconds, the system will update the bootup logo at the background automatically



For further technical inquiries, please refer to our technical support page for more details: [HERE](#)